

Quick Installation

- one person installation
- installs over wood/metal studs, drywall, concrete block etc
- waterproof - insect - rotproof
- ideal for high abuse applications (i.e. garage, carports, pools, storage sheds, basements)
- cleans quickly and easily.

before you begin, remember to always work safely, follow tool manufacturers safety instructions and wear safety glasses


Quick tips

- use #6 bugle-head screws*
- no need to pre-drill or counter-sink
- if installing over drywall use 1-5/8" (or longer) #6 bugle-head screws
- cuts cleanly and easily with standard woodworking tools


Quick tricks

- join panel ends over studs to maximize load capacity
- use a running bond (brick layer) pattern to minimize seams
- optional color matched screws available
- optional color matched trim available (panel edge trim)
- minor surface scratches or blemishes can be removed with a paper towel dampened with Acetone (read and follow label directions)

* for maximum load capacity, screw through every slot into every stud

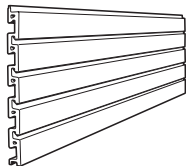


FRONT
Make certain to install panels right side up




TOP


as seen on:

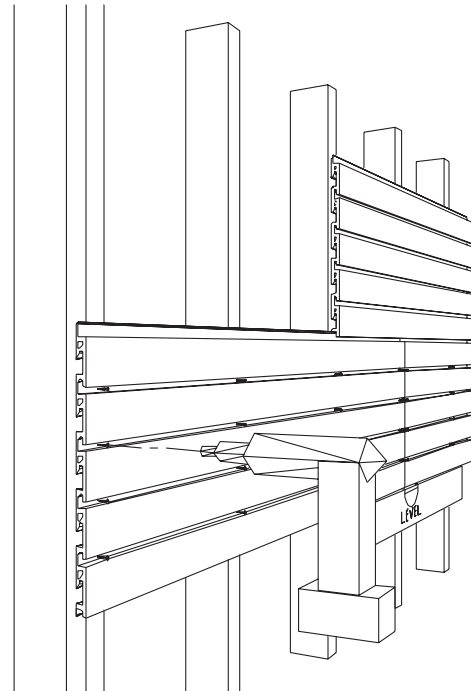

- 1 draw a line at lowest point you want storeWALL
- 2 place the first panel on this line and screw in place (make certain storeWALL is level and plumb)
- 3 place second panel NEXT to the first panel and screw panel in place
- 4 continue adding panels until the first row is complete
- 5 begin second row panels on top of first row and screw panels in place

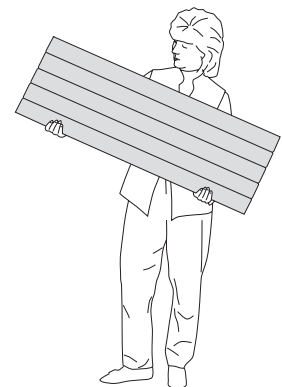

Panel dimensions

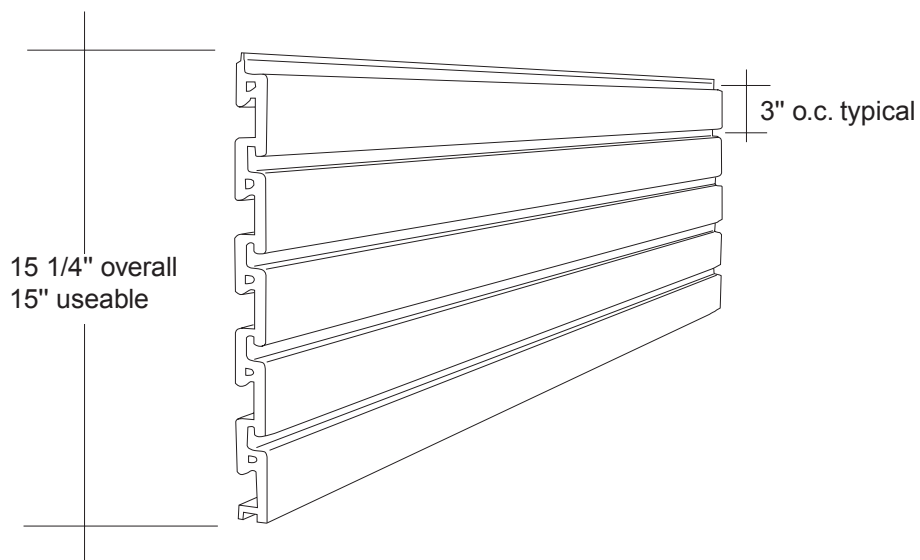

Tongue and groove stacking panels

typical 8' panels
4 panels per carton
10 sq ft per panel
40 sq ft per carton

typical 4' panels
6 panels per carton
5 sq ft per panel
30 sq ft per carton

